

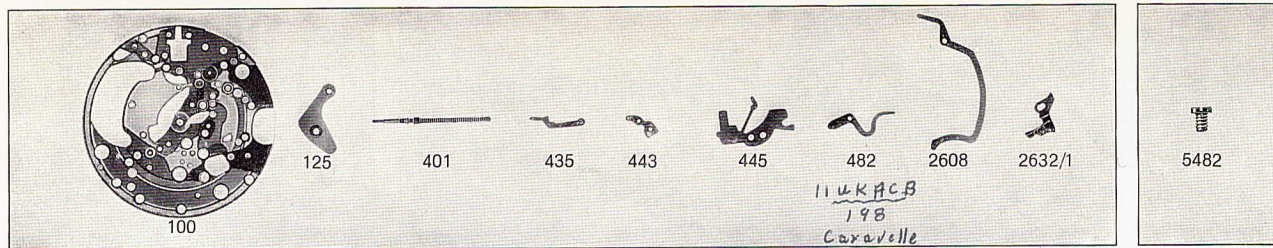


**Special parts for date corrector by pressure on the winding crown for calibers 1873 and 1876**

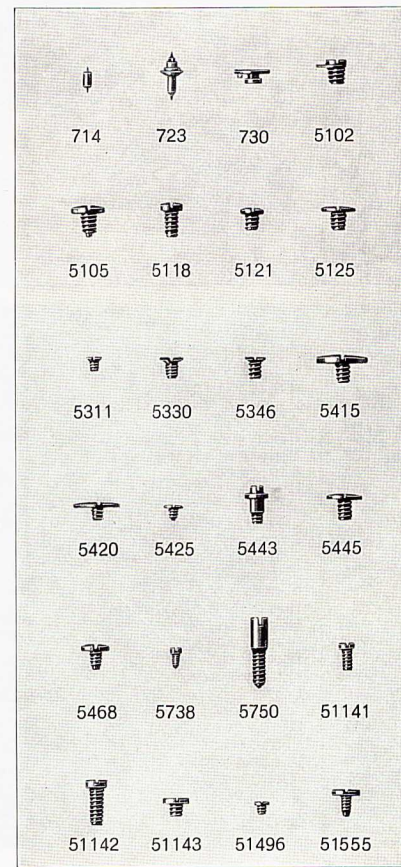

100	Plate	443	Setting lever	2632/1	Unlocking yoke for date indicator mounted
125	Pallet cock	445	Setting lever spring	5482	Screw for setting lever return-spring
401	Winding stem	482	Setting lever return-spring		
435	Yoke	2608	Unlocking yoke lever		

**Parts of basic caliber 1882**

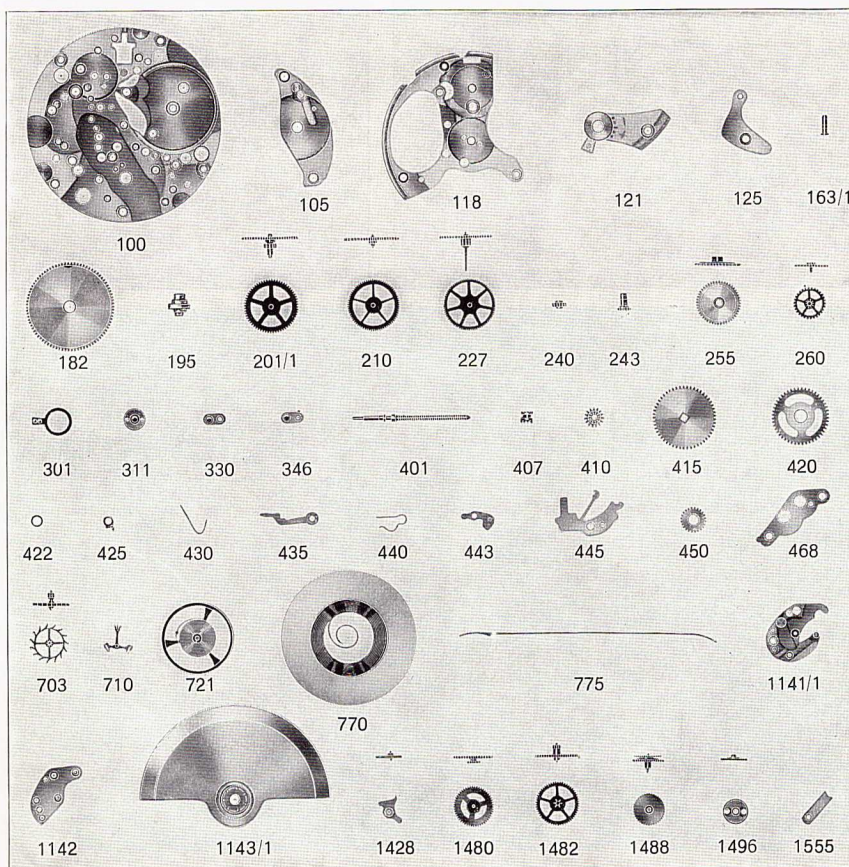

100	Plate	422	Crown wheel ring	1496	Oscillating weight axle
105	Barrel bridge	425	Click	1555	Winding-up wheel bolt
118	Combined bridge	430	Click spring	5102	Case screw
121	Balance cock for flat hairspring	435	Yoke	5105	Barrel bridge screw
125	Pallet cock	440	Yoke spring	5118	Combined bridge screw
163/1	Center pipe	443	Setting lever	5121	Balance cock screw
182	Barrel and cover	445	Setting lever spring	5125	Pallet cock screw
195	Barrel arbor	450	Setting wheel	5311	Upper end-piece screw, for balance
201/1	Large driving wheel	468	Cannon pinion guard	5330	Lower end-piece screw, for balance
210	Third wheel	703	Escape wheel and pinion, for lower end-piece	5346	Lower end-piece screw, for escape wheel
227	Sweep second wheel	710	Jewelled pallet fork and staff	5415	Ratchet wheel screw
240	Cannon pinion with clam notch	714	Pallet staff	5420	Crown wheel screw
243	Cannon pinion without clam notch	721	Balance with flat hairspring, regulated	5425	Click screw
255	Hour wheel	723	Balance staff, pivoted	5443	Setting lever screw
260	Minute wheel	730	Roller	5445	Screw for setting lever spring
301	Regulator for flat hairspring	770	Mainspring	5468	Screw for cannon pinion guard
311	Upper cap jewel with end-piece, for balance	775	Brake spring	5738	Hairspring stud screw
330	Lower cap jewel with end-piece, for balance	1141/1	Lower bridge for automatic device, mounted	5750	Dial screw
346	Lower cap jewel with end-piece, for escape wheel	1142	Upper bridge for automatic device	51141	Lower bridge screw for automatic device
401	Winding stem	1143/1	Oscillating weight, mounted	51142	Upper bridge screw for automatic device
407	Clutch wheel	1428	Stop click		
410	Winding pinion	1480	Winding-up wheel	51491	Screw for oscillating weight bolt
415	Ratchet wheel	1482	Driving gear for crown wheel	51496	Screw for oscillating weight axle
420	Crown wheel	1488	Paulw winding wheel, complete	51555	Screw for winding-up wheel bolt
		1491	Oscillating weight bolt		

AS  
1902