SEIKO

DIGITAL QUARTZ

Cal. DO31A

Cal. DO31A







4001 328




4245 324



4270 327




4313 192

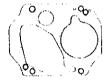

4398 111



4398 113

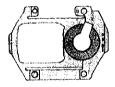

4398 114



4446 140



4510 481




4521 197



4530 231



☆ SEIKO TR926W

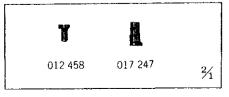

Cal. DO31A

Characteristics

Casing diameter: Maximum height:

19.0 mm × 25.6 mm

One disired language can be selected among five languages (English, Spanish, French, German and Italian)

to indicate the day of the week.

Dot matrix sweep display system: The time display and the calendar display start sweeping from right to left every hour on

the hour

Display medium : Nematic Liquid Crystal, FE-Mode.

Regulation system : Trimmer condenser

Illuminating light: Illuminates the display in the dark

Battery life indicator: All the digits in the display begin flashing.

PART NO.	PART NAME	PART NO.	PART NAME
4001 328 4245 324 4270 327 4313 192 4398 111 4398 113 4398 114 4446 140 4510 481 4521 197 4530 231 012 458 017 247 \$SEIKO TR926W \$Maxell SR926W \$U.C.C. 399	Circuit block Switch spring Battery connection () Connector Battery guard Liquid crystal panel frame Conductive connector frame Crystal unit cushion Liquid crystal panel Reflecting mirror Bulb Switch spring screw Tube for switch spring screw Silver (II) oxide battery Silver oxide battery		

Remarks:

☆SEIKO TR926W) ☆Maxell SR926W ☆U.C.C. 399


The substitutive battery might be added to the applied battery in the future. In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".


Note that SEIKO battery is marked with "SEIZAIKEN" on its (+) side.

TECHNICAL GUIDE

SEIKO DIGITAL QUARTZ

CAL. DO31A

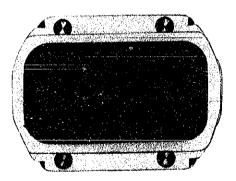

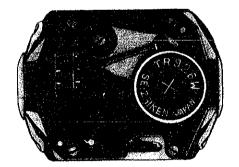


CONTENTS

ı.	SPECIFICATIONS	
11.	STRUCTURE OF THE CIRCUIT BLOCK	1
Ш.	DISPLAY FUNCTION	2
IV.	DISASSEMBLING AND REASSEMBLING	3
V.	CHECKING AND ADJUSTMENT	5
	Check battery voltage	5
	Check battery conductivity	5
	Check all dots display and liquid crystal panel	5
	Check conductivity of liquid crystal panel, circuit block and connector	5
	Check circuit block	6
	• Check current consumption	7
	Check conductivity of switch components	7
	Check accuracy	8
	Check functioning and adjustment	8

I. SPECIFICATIONS

Cal. No.	D031A		
Item			
Display medium	Nematic Liquid Crystal, FEM (Field Effect Mode)		
Liquid crystal driving system	Multiplex driving system		
Display system	 Dot matrix display system Time display: Hour, minute and second (12 or 24 hour indication) Calendar display: Day and date 		
Additional mechanism	 Dot matrix sweep display system Sweep display test system Illuminating light Battery life indicator 		
Loss/gain	Loss/gain at normal temperature range Monthly rate: less than 15 seconds (Annual rate: less than 3 minutes)		
Outside diameter	φ26.0mm (19.0mm between 6 o'clock and 12 o'clock sides) (25.6mm between 3 o'clock and 9 o'clock sides)		
Height	3.9mm		
Regulation system	Trimmer condenser		
Measuring gate by Quartz Tester	Any gate is available. (Measure the daily rate with all dots displayed)		
Battery	SEIKO (SEIZAIKEN) TR926W, Maxell SR926W or U.C.C. 399. Battery life is approximately 2 years. Voltage: 1.55V		

II. STRUCTURE OF THE CIRCUIT BLOCK

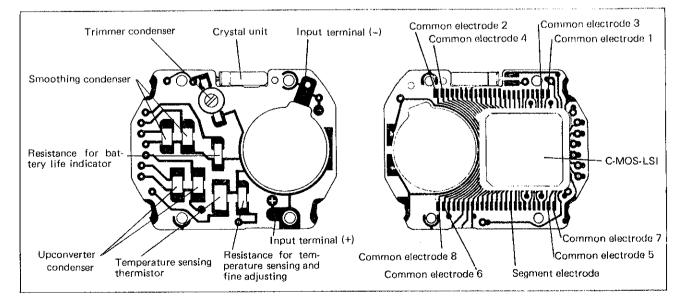


-1-

III. DISPLAY FUNCTION

• Cal. D031A uses the "Dot matrix display system" in which digits, letters and marks are displayed by the arrangement of small dots. It is equipped with the "Sweep display system" which enables the time display and calendar display to start sweeping from right to left every hour on the hour and when button B is depressed.

• Time and calendar display

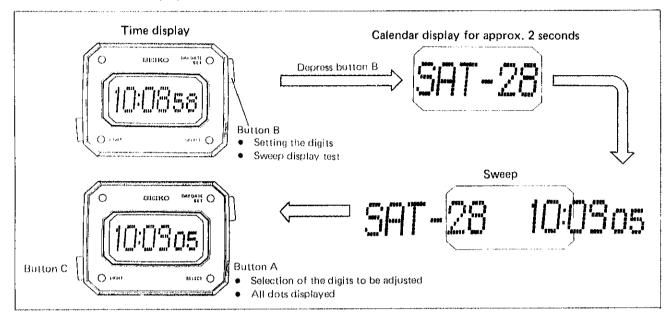

• Sweep display test


If button B is depressed for more than 2 seconds from the time display, the sweep is repeated continuously as Time display -> Calendar display -> Time display. Depress button A, B or C to return to the time display.

-2-

All dots displayed


Depress button A for more than 2 seconds and all the dots are displayed.

This is designed to facilitate checking accuracy. Depress button A, B or C to return to the time display.

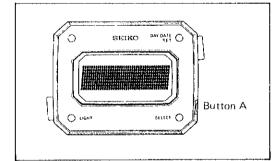

- Selection of the language to indicate the day of the week
- From the time display depress button A six times, and the language initial and the day of the week are displayed with the language initial flashing.
- The language initial changes in the following order by each depression of button B and the language to indicate the day of the week also changes automatically.

EN (English) → ES (Spanish) → FR (French) — 1 ——IT (Italian) ← DE (German) ←

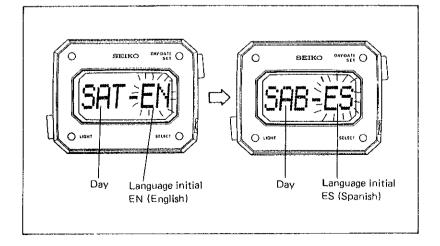

IV. DISASSEMBLING AND REASSEMBLING

1. Disassembling and reassembling of the case

Ex.) Case No. D031-4000 R0

This model uses decorative pins (4 pcs.) on the glass.


How to set the glass

Adhere the glass with decorative pins to the casebezel by the adhesive for glass S-310. Also apply the S-310 on the bottom (4 places) of the decorative pins.


Note: Apply the S-310 slightly to the surface to be adhered so that it is uniformly coated.

Adhering time

When left at the normal temperature (24°C) 24 hours When left at the temperature of $40^{\circ}\text{C} \sim 50^{\circ}\text{C}$ 5 to 6 hours

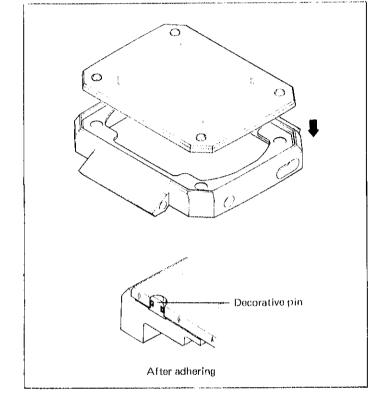

Note: The glass is supplied with the decorative pin with gasket. (The decorative pin and the gasket for decorative pin can be supplied separately as well.)

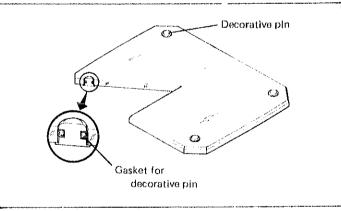


2. Disassembling and reassembling of the module

Disassembling Procedures Figs.:

Reassembling Procedures Figs.:

(1)

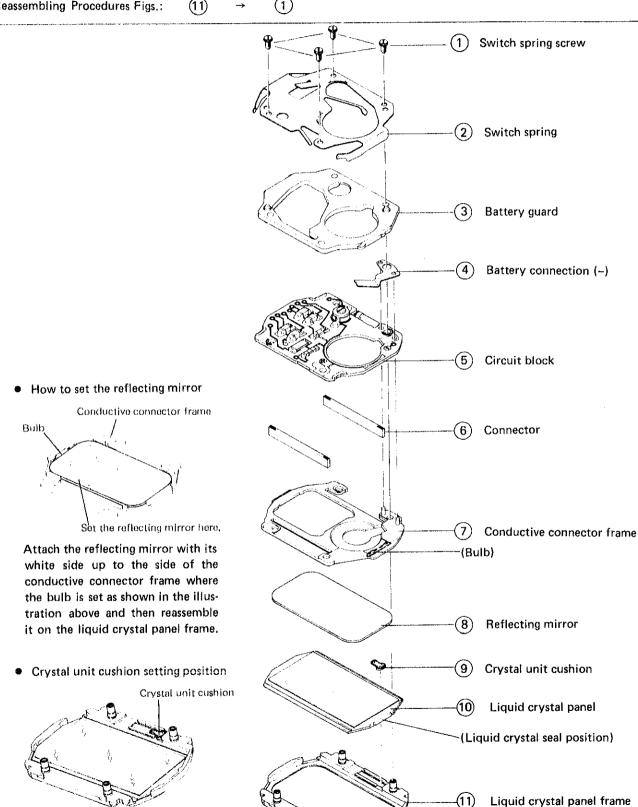

V. CHECKING AND ADJUSTMENT

• Rafer to the "SEIKO QUARTZ TECHNICAL GUIDE, GENERAL INSTRUCTION" for Digital Watches for details.

Procedure

CHECK BATTERY VOLTAGE


Result:

More than 1.5V: Normal Less than 1.5V: Defective

Replace the battery with a new


CHECK BATTERY CONDUCTIVITY

CHECK ALL DOTS DISPLAY AND LIQUID CRYSTAL PANEL

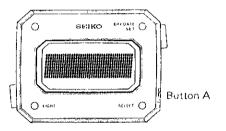


All dots displayed

(Ex.)

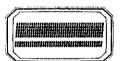

The figure indicates poor conductivity in a part of the common electrode.

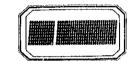

The figure indicates poor conductivity of an electrode other than the common electrode.

• Depress button A for more than 2 seconds and all the dots light up.


Result:

All the dots light up: Lines of dots are not displayed partially crosswise or lengthwise: Defective

- · Check the common electrode of the liquid crystal panel at 8 places.
- · Check the connector and the circuit block electrode for dust, lint, and contamination.

CHECK CONDUCTIVITY OF LIQUID CRYSTAL PANEL, CIRCUIT BLOCK AND CONNECTOR

• Liquid crystal panel electrode

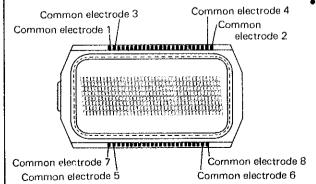

• In Cal. D031A, there are 8 common electrodes on the liquid crystal panel as shown in the illustration on the left and the number of electrodes used are more than those of other calibres,


Therefore its conductivity may be affected easily both by the dust, lint, and contamination on the connecting portions between the common electrode and the connector, and their set position. Check the liquid crystal panel, circuit block, and connector.

Procedure

CHECK CIRCUIT BLOCK


(1) Check the output voltage of the circuit block.

Range to be used: DC 3V

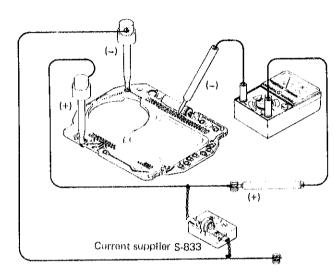


Result:

More than 0.8V: Normal Less than 0.8V: Defective Replace the circuit block with a new one.

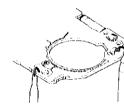

(2) Check the upconverter voltage of the circuit block.

Range to be used: DC 3V

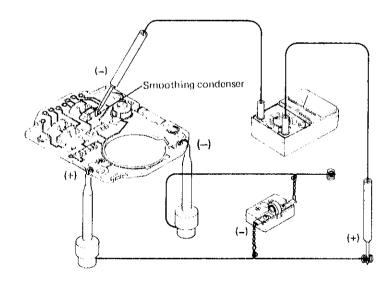

Result:

More than 2.5V: Normal Less than 2.5V: Defective


Replace the circuit block with a new one.

CHECK CONDUCTIVITY OF SWITCH COMPONENTS

- · Check to sec if the switch spring (arrow-marked in the illustration on the left) touches the switch terminals of the circuit block when they are pushed in with the tips of tweezers and to see if they do not touch the switch terminals of the circuit block
- for dust, lint, and other contaminations.

Procedure


CHECK CURRENT CONSUMPTION

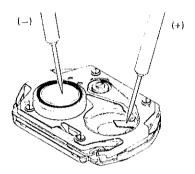

Result:

Less than 3.4µA: Normal More than 3.4µA: Defective

* How to check if the liquid crystal panel or the circuit block is defective when the current consumption is more than 3.4µA.

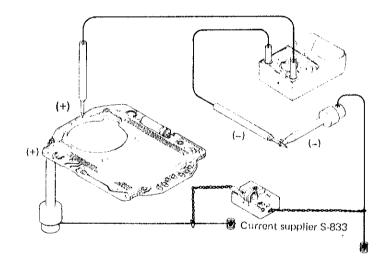

• Check the current consumption for the circuit block alone.

Result:

Result:

Less than 2.5µA:

Replace the liquid crystal panel with a new one.

More than 2.5µA:

Replace the circuit block with a

Functions correctly:


Does not function correctly: Defective

Normal

(If it is not adjustable, replace the switch spring with a new one.)

Procedure

CHECK ACCURACY

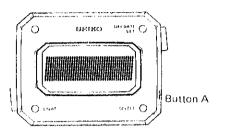

• Depress button A, B or C to return to the time display.

all the dots and check the daily rate.

• Depress button A for more than 2 seconds to light up

All dots displayed

CHECK FUNCTIONING AND ADJUSTMENT

• Check to see if each display is activated correctly by depressing each button in accordance with the instruction on page 2.

All procedures of Disassembling, Reassembling, Checking and Adjustment are completed.