



SHORTENING OF 'TRUE' BRACELETS


References: 04548, 04549, 04550, 04551, 04570, 04571, 04572, 04573, 04574, 04575, 04576, 04577, 04578, 04579

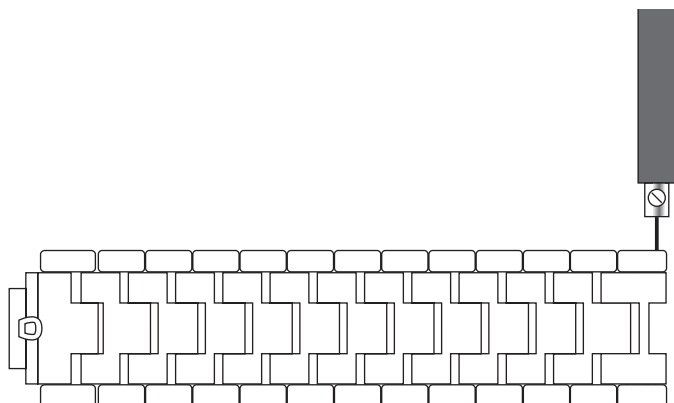


– Knock out the pin with pin extractor Ø 0.70 mm in any direction.

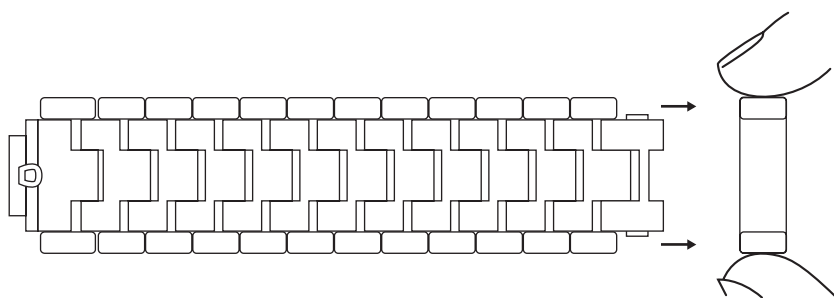


– Remove the ceramic end piece.

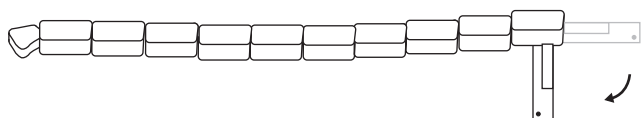


– Turn down the composite link in vertical position.

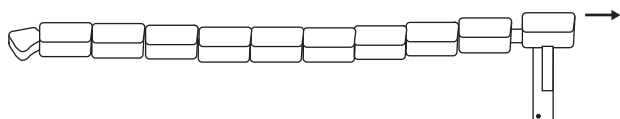


– Remove the next ceramic link.

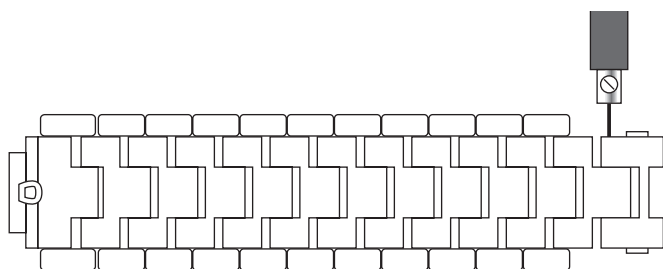


– Push out the pin from the composite link with the pin extractor Ø 0.70 mm.

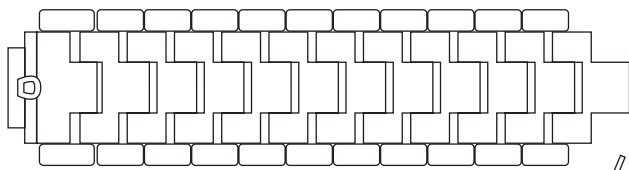


– Shorten the bracelet as desired.

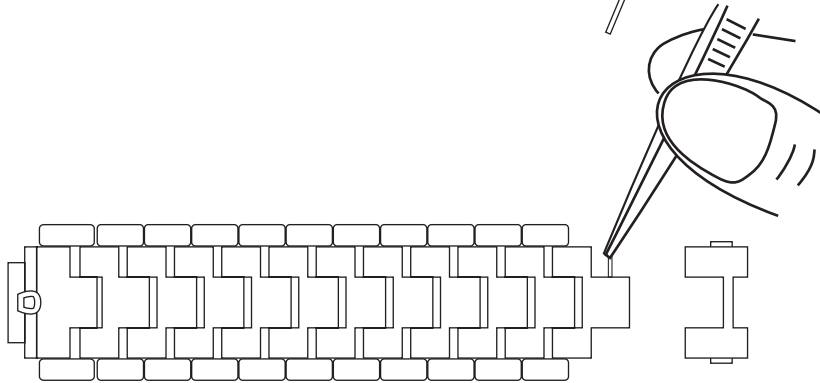


– Insert the tube into the composite link. Add the end-piece and insert the pin.

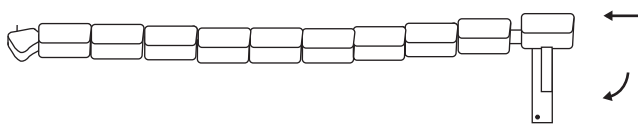


– Turn down the composite piece in vertical position and fit the ceramic link.

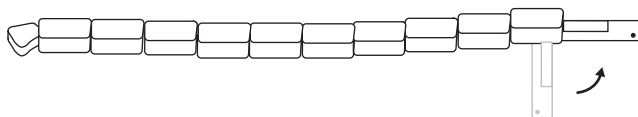

– Turn up the composite piece in horizontal position.

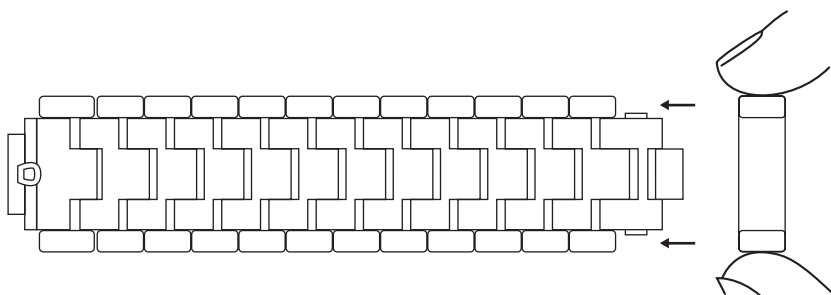

– Fit the ceramic end piece.

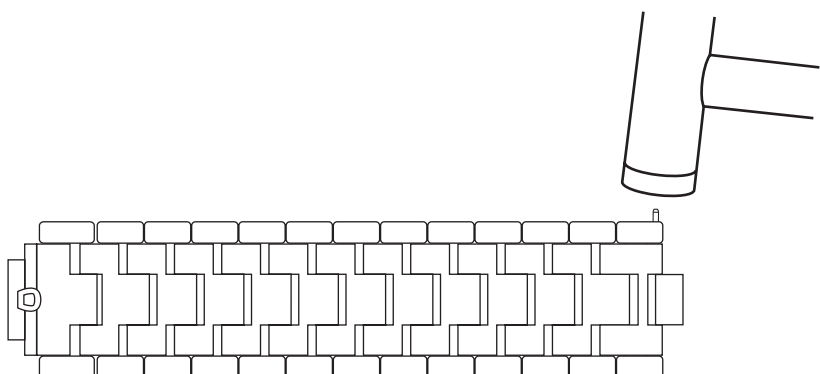

– Knock in the pin in any direction.