


Citizen Movement

Caliber 6870

Abbreviated Instructions

Specifications

- Movement Caliber: 6870
- Movement Type: Multi Function
- Accuracy: +/- 20 seconds per month under normal operating conditions
- Operating Temperature Range: 0-55°F (32-131°F)
- Battery: Citizen #280-44 (SR927W)
- Battery Life: Approximately 2 years (temperature, alarm use and age of watch will affect battery life)
- *specifications subject to change without prior notice for product improvement

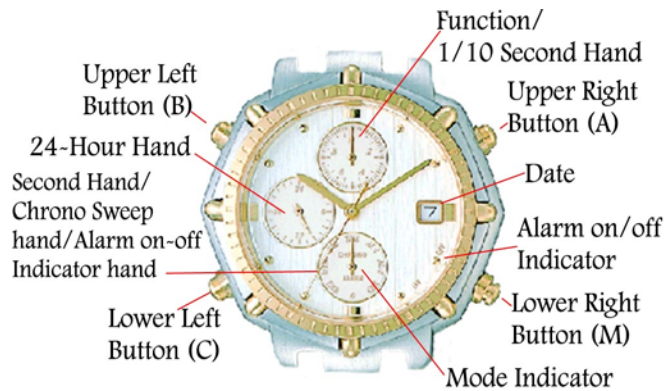

IMPORTANT NOTE: After a battery change, or malfunction of the watch, an ALL RESET AND 0-POSITIONING must be performed. If this is not done, watch will not operate correctly.

ALL RESET AND 0-POSITIONING.

- Pull out the lower right (M) button.
- Simultaneously press and hold the upper right button (A), upper left button (B) and lower left button (C) for 3 seconds and release.
- Press in the lower right button (M) to the closed position.
- Press and release the lower right button (M) until mode indicator points to '0'. The hour, minute, second, 24-hour and auxiliary hands should move to the 12/24 o'clock position. If these hands fail to move to the 12/24 o'clock position the following steps must be done to align the hands before the watch will work properly.
- Pull the lower right button (M) out one 'click'.
- Press and release the upper right button (A) (press and hold for rapid advance) until the second hand aligns with the 12 o'clock position.
- Press and release the upper left button (B) until the auxiliary hand aligns with the 12 o'clock position and date indicates "1".
- Press and release the lower left button (C) until the hour, minute and 24-hour hands align to the 12/24 o'clock position.
- Push the lower right button (M) in to the normal position.

TO SET THE TIME (TME)

- Press and release the lower right button (M) until the mode hand points to TME.
- Pull the lower right button (M) out one 'click'.
- Press the upper left button (B) to advance time forward or The lower left button (C) to move time backward. Set time to correct hour and minute by using the 24 -hour dial to determine a.m. or p.m..
- Push the lower right button (M) back in to normal position.

TO SET QUICK ALARM (AL-1)

- Press and release the lower right button (M) until the mode hand points to AL-1.
- Press and hold the upper left button (B) to advance time forward or the lower left button (C) to move time backward. Once hands have been moved the alarm is automatically turned on.
- Press and release the upper right button (A) to cancel alarm setting. Hands will return to current time.

TO SET DAILY ALARM (AL-2)

- Press and release the lower right button (M) until the mode hand points to AL-2.
- Pull the lower right button (M) out one step.
- Press and hold the upper left button (B) to advance time forward or the lower left button (C) to move time backward. Alarm is automatically turned on.
- Press and release the upper right button (A) to adjust alarm volume or to turn alarm off.
- Push the lower right button (M) in to normal position.

TO USE CHRONOGRAPH (CHR)

- Press and release the lower right button (M) until mode hand points to CHR.

- Press and release the upper right button (A) to start and stop chronograph.
 - Press and release the lower left button (C) to reset to zero.
- Note:** Auxiliary dial displays minutes and the 1/20 second display, after 1 minute of timing, may be displayed by pressing and holding the upper left button (B).

TO USE TIMER (TMR)

- Press and release the lower right button (M) until mode hand points to TMR.
- Press and release the upper left button (B) until the desired minutes are set on the auxiliary dial.
- Press and release the upper right button (A) to start and stop the timer.
- Press and release the lower left button (C) anytime during countdown to engage fly-back feature.

TO SET DUAL TIME (L-TM)

- Press and release the lower right button (M) until mode hand points to L-TM.
- Pull the lower right button (M) out one 'click'. Set time in the same manner as normal time setting.
- Push the lower right button (M) in to normal position.

TO SET CALENDAR (CAL)

- Press and release the lower right button (M) until the mode hand points to CAL.
- Pull the lower right button (M) out one 'click'.
- Press and release the upper right button (A) to set month. Second hand indicates month number 1-12.
- Press and release the upper left button (B) to set date.
- Push the lower right button (M) in to normal position.

For additional features and instructions, please refer to the full instruction manual or visit our web site at www.citizenwatch.com